

# Analog Transmission

## Introduction

When data in either digital or analog forms needs to be sent over an analog media it must first be converted into analog signals. There can be two cases according to data formatting.

**Bandpass:** In real world scenarios, filters are used to filter and pass frequencies of interest. A bandpass is a band of frequencies which can pass the filter.

**Low-pass:** Low-pass is a filter that passes low frequencies signals.

When digital data is converted into a bandpass analog signal, it is called digital-to-analog conversion. When low-pass analog signal is converted into bandpass analog signal it is called analog-to-analog conversion.


## Digital-to-Analog Conversion

When data from one computer is sent to another via some analog carrier, it is first converted into analog signals. Analog signals are modified to reflect digital data, i.e. binary data.

An analog is characterized by its amplitude, frequency and phase. There are three kinds of digital-to-analog conversions possible:

- **AMPLITUDE SHIFT KEYING**

In this conversion technique, the amplitude of analog carrier signal is modified to reflect binary data.

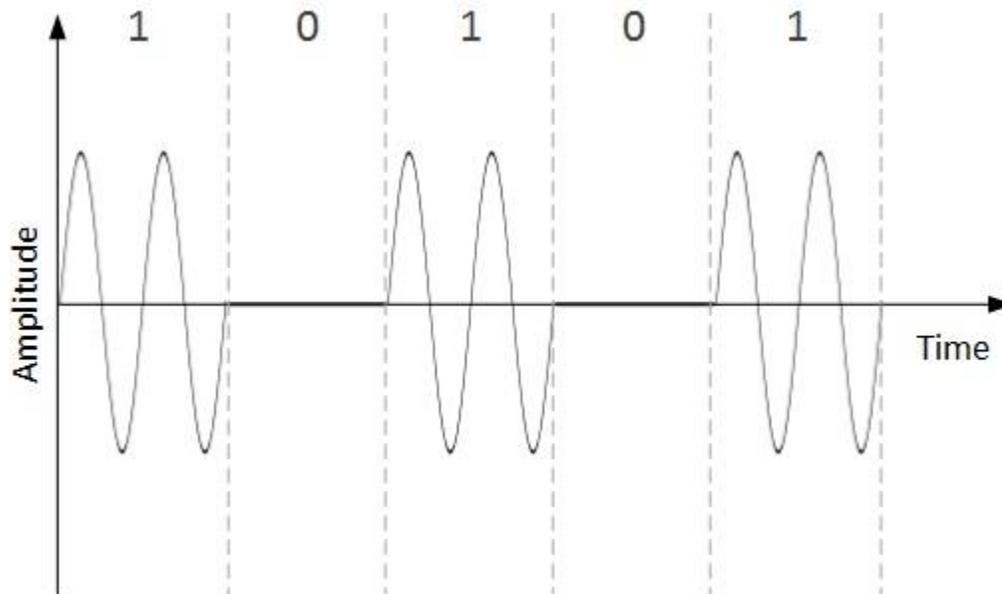


[Image: Amplitude Shift Keying]

When binary data represents digit 1, the amplitude is held otherwise it is set to 0. Both frequency and phase remain same as in the original carrier signal.

- **FREQUENCY SHIFT KEYING**

In this conversion technique, the frequency of the analog carrier signal is modified to reflect binary data.

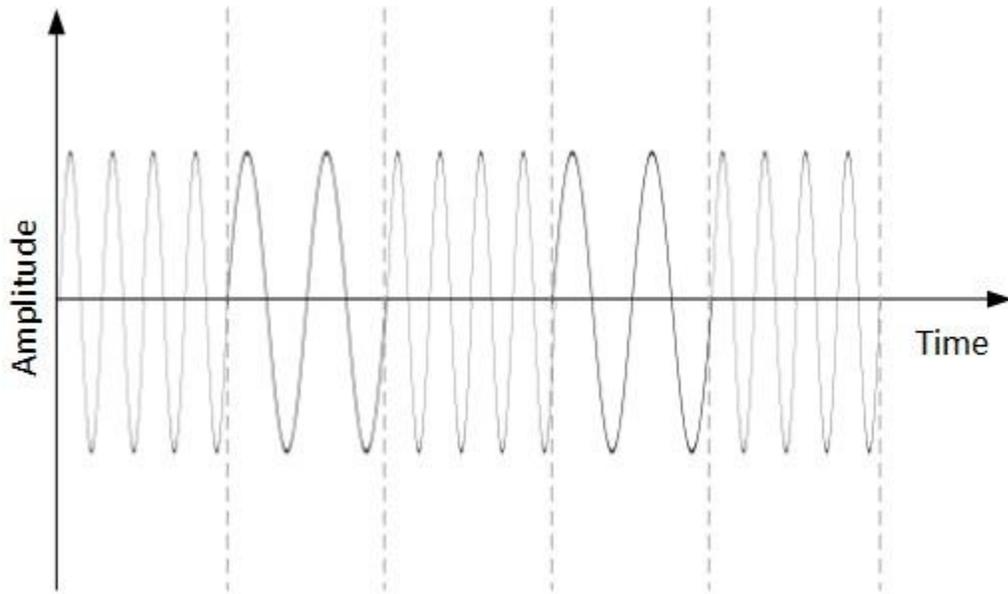


shift keying]

[Image: Frequency

This technique uses two frequencies,  $f_1$  and  $f_2$ . One of them, for example  $f_1$ , is chosen to represent binary digit 1 and the other one is used to represent binary digit 0. Both amplitude and phase of the carrier wave are kept intact.

- **PHASE SHIFT KEYING**

In this conversion scheme, the phase of the original carrier signal is altered to reflect the binary data.

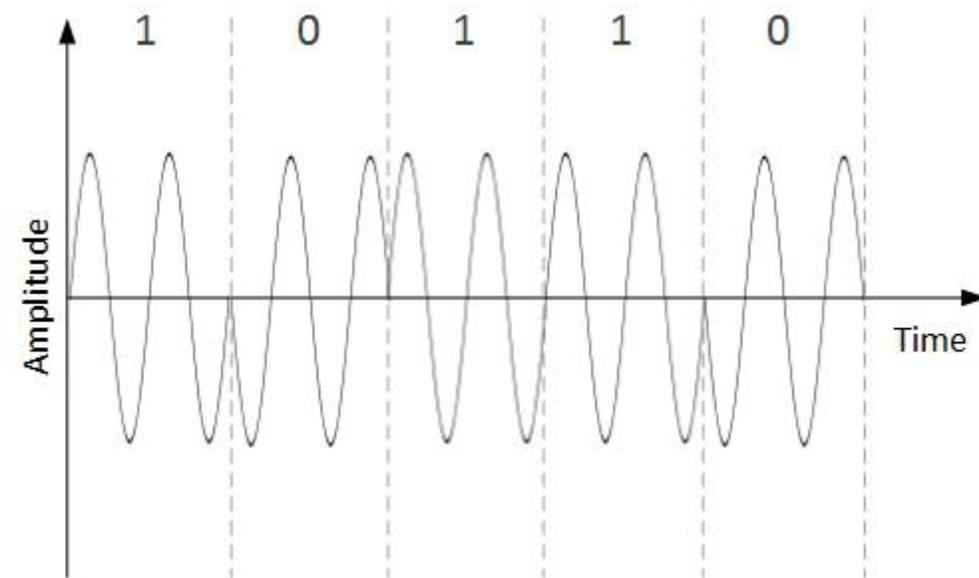

keying]

[Image: Phase shift


When a new binary symbol is encountered, the phase of the signal is altered. Amplitude and frequency of the original carrier signal is kept intact.

- **QUADRATURE PHASE SHIFT KEYING**

QPSK alters the phase to reflect 2 binary digits at once. This is done in two different phases. The main stream of binary data is divided equally into two sub-streams. The serial data is converted in to parallel in both sub-streams and then each stream is converted to digital signal using NRZ technique. Later, both the digital signals are merged together.

## Analog-to-analog conversion


Analog signals are modified to represent analog data. This conversion is also known as Analog Modulation. Analog modulation is required when bandpass is used. Analog to analog conversion can be done in three ways:

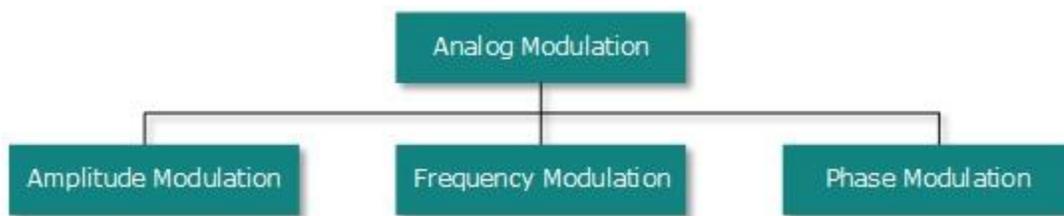

[Image: Types of Modulation]

- **AMPLITUDE MODULATION**

In this modulation, the amplitude of the carrier signal is modified to reflect the analog data.

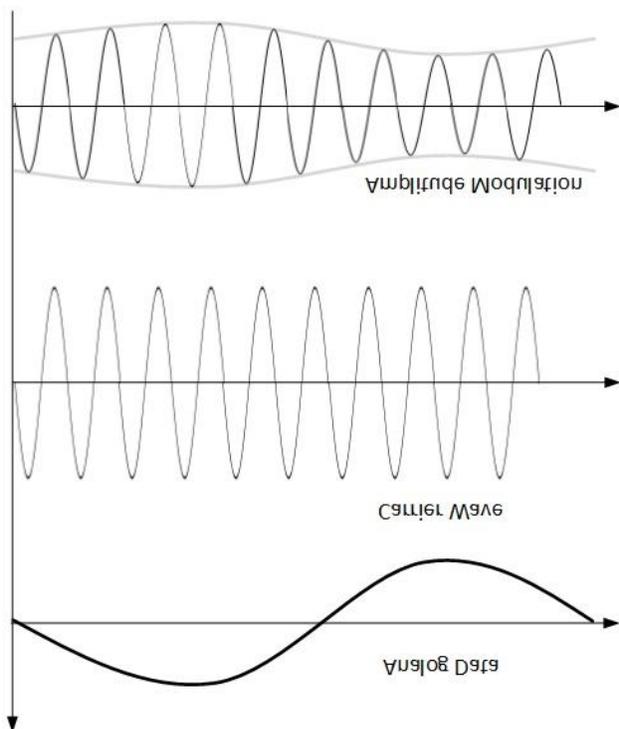


[Image: Amplitude Modulation]

Amplitude modulation is implemented by means of a multiplier. The amplitude of modulating signal (analog data) is multiplied by the amplitude of carrier frequency, which then reflects analog data.

The frequency and phase of carrier signal remain unchanged.

- **FREQUENCY MODULATION**

In this modulation technique, the frequency of the carrier signal is modified to reflect the change in the voltage levels of the modulating signal (analog data).

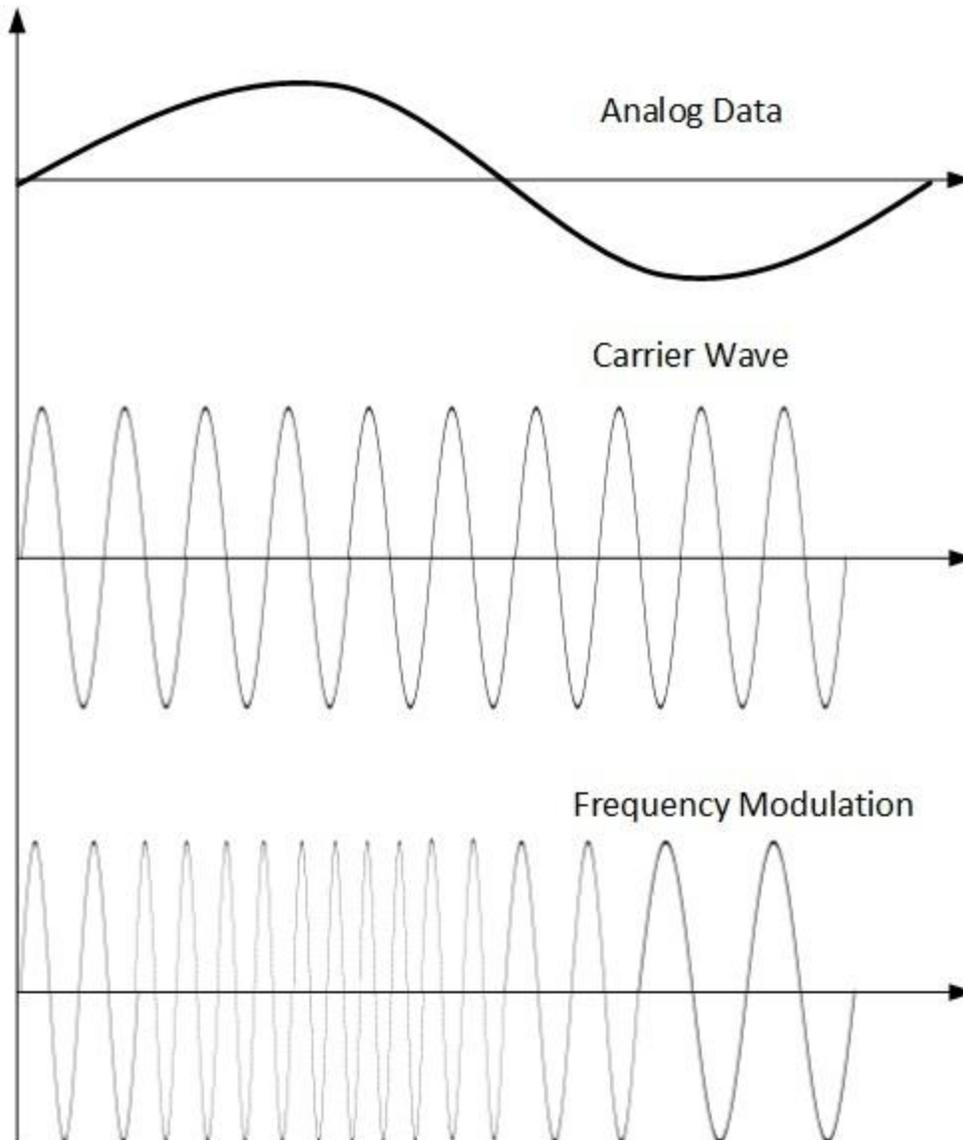


[Image: Frequency Modulation]

The amplitude and phase of the carrier signal are not altered.

- **PHASE MODULATION**

In the modulation technique, the phase of carrier signal is modulated in order to reflect the change in voltage (amplitude) of analog data signal.

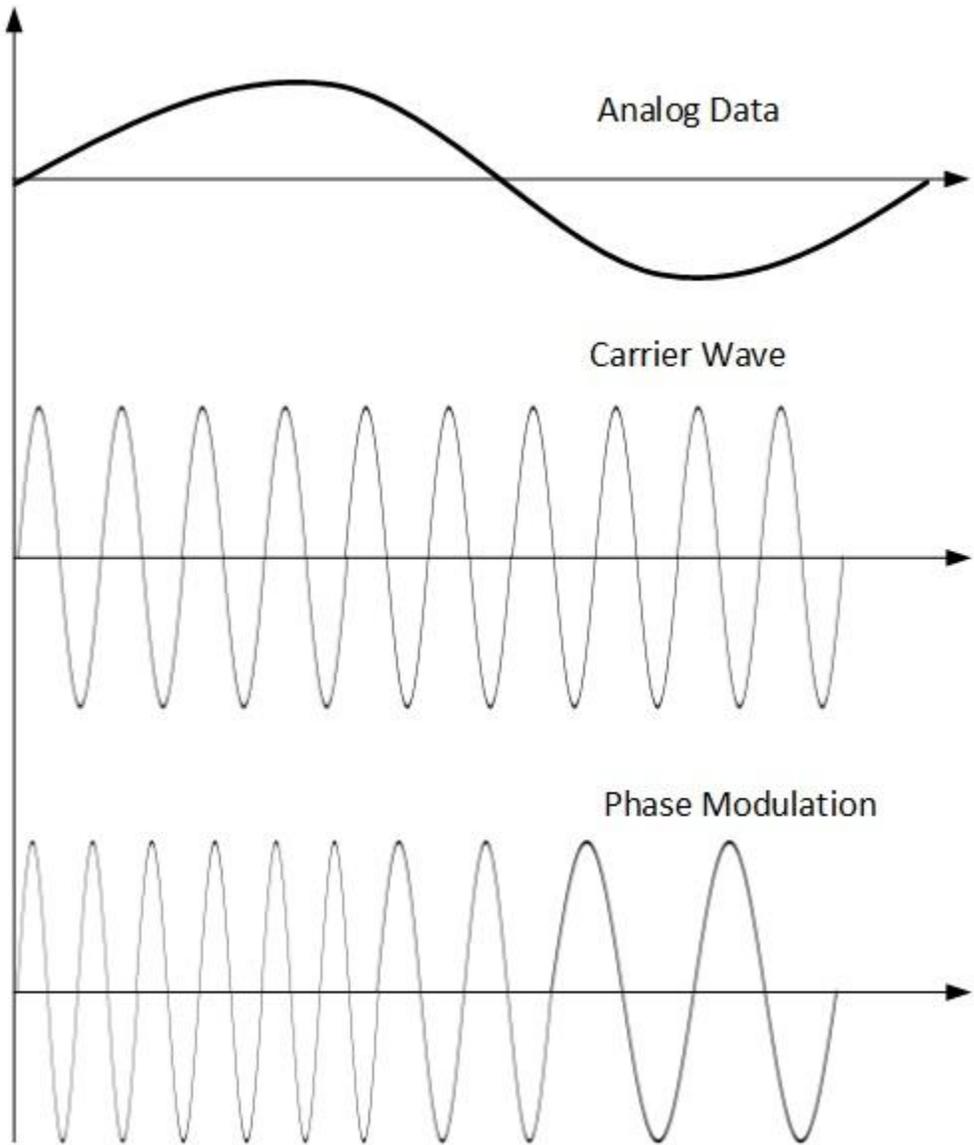

[Image: Phase Modulation]

Phase modulation practically is similar to Frequency Modulation, but in Phase modulation frequency of the carrier signal is not increased. Frequency is carrier is signal is changed (made dense and sparse) to reflect voltage change in the amplitude of modulating signal.

Source:

[http://www.tutorialspoint.com/data\\_communication\\_computer\\_network/analog\\_transmission.htm](http://www.tutorialspoint.com/data_communication_computer_network/analog_transmission.htm)